## To confirm the software version of your PR-600C/PR-600

- 1. Press the power switch to turn on your machine.
- 2. Touch "OK" at the animation screen. Then press (Setting Key) on the display.
- 3. See the software version number displayed at the right bottom.
- (If the version is already v.1.41 or higher, it is not necessary to update your machine with the program on this page.)

## How to update your machine's software

- 1. Open the "My Computer" folder on your computer.
- 2. Turn off the main power switch. (Only when the power switch is turned on)
- 3. Turn on the main power switch pushing the automatic needle threading button.



- 4. Connect your computer and the PR-600/PR-600C with the USB cable. (Only when they are disconnected)
- 5. The "Removable Disk" appeares in the "My Computer" folder on your computer. Then Copy the above file into the "Removable Disk".
- 6. The downloading will automatically start and "USB downloading" is displayed. Version up program Ver. 1.10 USB downloading...

downloading	Compact Flash
	USB
	Floppy Disk

7. After the "USB download OK." is displayed, the downloading is completed. Version up program Ver. 1.10 USB download OK.



Floppy Disk

- 8. Press the "USB" button on the screen.
- 9. The update process will automatically start.

After "Version up complete! Please shut down."is displayed, Turn off the main power switch. Version up program Ver. 1.10 Found UI:SPPRG.SAP Reading 17/17 Writing 17/17 Version up complete! Please shut down. USB

PR-600C/PR-600 will be updated to Version 1.41 and ready to use.